
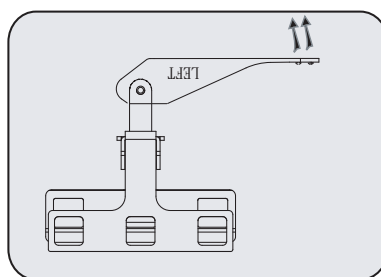
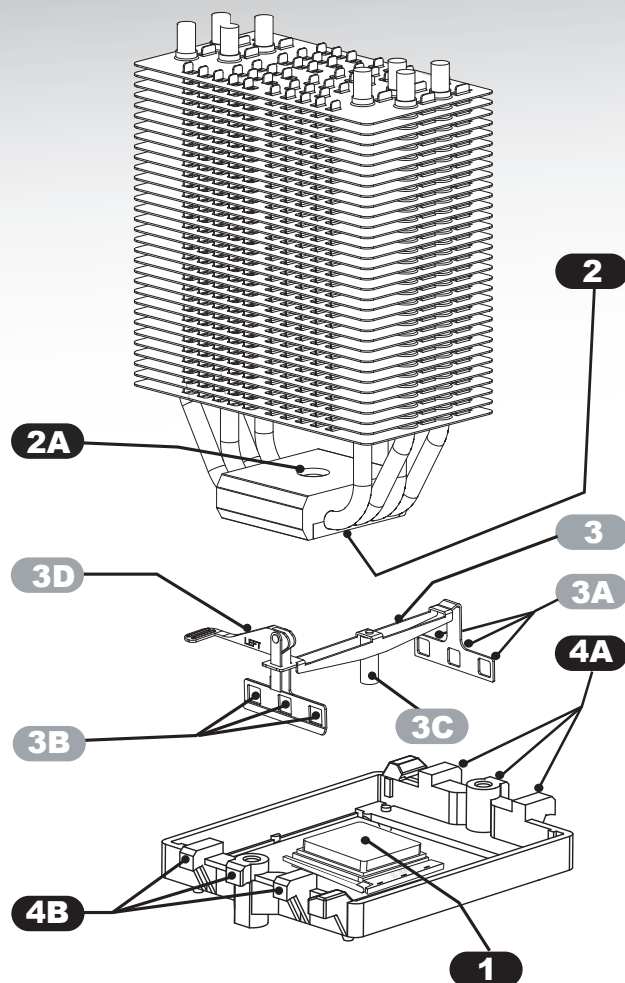
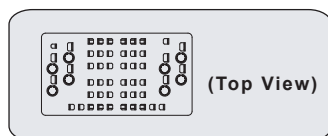
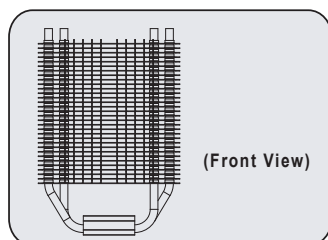


HIGH-RISER


HR-01 Installation Guide

K8 (Socket 754/939/940) installation for HR-01

1. Apply thermal paste evenly on the CPU DIE (Item 1) and the bottom of the heat sink.
2. Place the heat sink on top of the CPU, then insert the heat sink clip with the 6 square-opening (Item 3) between the heat pipes and make sure the white cylindrical plastic (Item 3C) is inserted inside the center hole (Item 2A) located at the top of the heat sink base. Slightly adjust the heat sink to ensure a complete contact with the CPU DIE.
3. With the 6 square-opening heat sink clip, secure one end of the heat sink clip (Item 3A) onto the lugs (Item 4A) on the retention bracket, and then do the same for the other side. (Item 3B/4B)
4. Finally, turn the lock handle (Item 3D) on the heat sink clip counter-clockwise all the way to the other end to secure heat sink in place.
5. Make sure there is well managed airflow inside the case. Please check out Thermalright website for suggested HR-01 passive-cooling operating conditions.

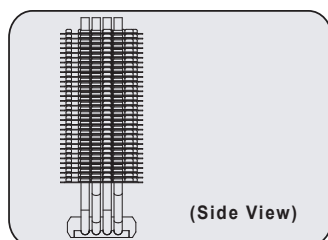

(Before)

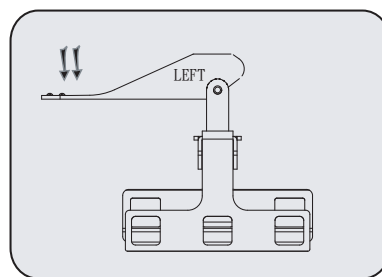

(After)

HR-01 Parts List (For K8 Platform)

Parts List	Quantity
Heat sink body	1
Heat sink clip	1
Thermal paste in syringe	1
120mm fan wire clips	2

Remarks:

* For Intel P4 socket 478 platform, purchase of extra parts required.

* For Intel P4 LGA775 platform, a different HR-01 version is available for sale.